

---

## 1.Safety and Precautions

- ◆ Switch off the phone in the vicinity of chemical plants, gas stations and other locations containing explosive objects.
- ◆ Keep the phone far away from children.
- ◆ When driving, please use the hands free calling device (purchased separately) to ensure safety. Please park the car at roadside for communication unless in emergency.
- ◆ Switch off the phone when boarding an aeroplane and do not switch the phone on during the flight.
- ◆ Be careful when using the mobile phone in the vicinity of such devices as pacemakers, hearing aids and other electro-medical equipment, which may be interfered by the mobile phone.
- ◆ No guarantee for the accessories and parts not produced by the original factory.
- ◆ Never attempt to disassemble the phone by yourself. Contact the supplier in case of any trouble with your mobile phone.
- ◆ Do not recharge the phone without battery being installed.
- ◆ Charge the phone in well-ventilated environment and keep away from inflammable and high explosive articles.
- ◆ To avoid demagnetization, keep the handset away from magnetic substances, such as magnetic discs or credit cards.
- ◆ Keep the phone away from liquid. If soaking or erosion occurs, take the battery out and contact the supplier.
- ◆ Avoid using the phone in too high or too low temperature environments. Never leave the phone exposed under direct sunlight, in high humidity or in a dusty environment.
- ◆ Do not use liquid or a damp cloth with strong detergents to clean the handset.

### Charging your battery

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only approved batteries and recharge your battery only with approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a long period, it may be necessary to connect the charger, disconnect it and then reconnect it to begin charging the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting will occur when a metallic object such as a

---


coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

**Note: Actual operation time of the battery varies according to operation mode, network settings and call settings.**

### **Procedure for battery charging**

- Connect the charger to a main socket and insert the charging plug into the right-side socket of the phone in the proper direction.
- The phone will display "" and start charging after it is properly connected. The battery icon will display the charging process visually.
- When switched off, the phone will display the charging process visually.
- When the phone battery is fully charged, the charging process stops automatically and the battery icon indicates a full grid on the screen. After the battery is fully charged, please unplug the phone as soon as possible and take off the charging plug.

### **Note:**

1. After the phone has run out of battery, we recommend you recharge in time.
2. To ensure safety, do not change the parts and accessories of the battery by yourself or take off the battery shell.
3. We suggest you only use the original battery supplied with your phone by our company to avoid any damage to your phone.
4. The temperature range for charging the phone is 0°C-40°C. Do not charge the battery in too high or too low temperatures.
5. Do not use the mobile phone during charging. Keep the phone away from charger before you use it.
6. Please don't keep charging for a long time. Pull out the charger quickly after the battery is fully charged.

## 2. EASYUSE Specification

Network: EGSM900/DCS1800 Dual Band

Dimensions: 135 mm x 58.5 mm x 16 mm

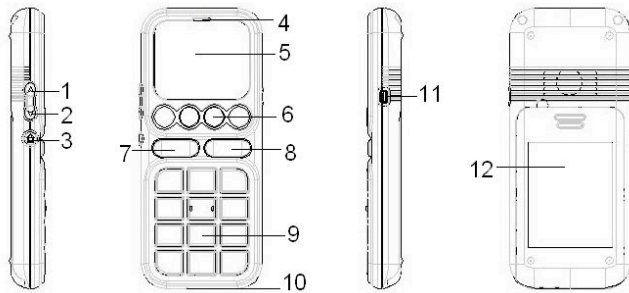 
Weight: 111g (including battery)

Talk time: about 2.0-2.5 hours, subject to network and usage conditions

Standby: about 150-200 hours

Battery: 700 mAh Li battery

### Appearance



1. Side Key A	2. Side Key B	3. Menu key
4. Earpiece	5. Main Screen	6. Memory key
7. Calling key	8. Ending key	9. Numeric key
10. MIC	11. Charging/Headset interface	12. Battery cover

---

### 3. Installation Instructions

#### What is a SIM card?

When registering your mobile phone number, you will have a SIM card (Subscriber Identity Module) provided by the network supplier.

Please handle the SIM card with care, twisting or pressing it may cause damage. If it is lost, please contact your network operator immediately for help.

**Note: A SIM card can be easily damaged if its metal contacts become scratched. Therefore, take special care when holding or inserting it and keep it away from small children.**

#### Installing your SIM card

Switch off your phone before installing the SIM card. To install the SIM card at the back of the phone, follow the steps below:

1. Take the back cover off by pushing down on the grooves, sliding the cover off.
2. Put the card into the groove gently and push it down until it doesn't move.

#### PIN

You cannot activate the PIN setting of the SIM card in EASYUSE. It needs to be activated in a normal phone. If the PIN protection function is enabled, the screen will display "Enter PIN" each time the phone is switched on. You need to input the correct code and press the MENU key to continue.

PIN is the password provided by your network operator. It is usually 4 digits. When you input the PIN code, the screen displays "\*" to replace the number entered.

<Warning>: If you enter the PIN incorrectly three times in a row, the SIM card will be locked. Please contact your network operator immediately for decoding. Attempting to decode by yourself may result in the permanent failure of the SIM card.

---

## 4. Brief Introduction

### Communication control keys

Calling key is used to make a call after a number has been entered or selected from the phone book, or to answer an incoming call. In idle screen, press calling key to display recent calls. In talking mode, you can press calling key to enter hands free mode.

Ending key is used to end a call during calling or conversation, or to quit the menu and return to idle screen. Press and hold the ending key for about two seconds to turn the phone on/off.

In talking mode, press Side Key A to increase the volume, press Side Key B to decrease the volume.

### Memory key, Menu key and Numeric key

#### Memory Key

Memory keys from M1 to M4 are used to set the speed-dialing numbers.

The length of a speed-dial number does not go over 16 digits.

#### Menu Key

Menu key is used to enter some functions: Phone Book, SMS, Ring Tone Settings and Time and Date Settings. It is also used to set the parameters or confirm an operation.

#### Numeric Key

Numeric keys from 0 to 9 and symbol keys \* and # are used to input the number or password.







 
Pressing "\*" key in standby mode can input "+" or "P" or "W" symbol.

Pressing and holding "\*" key for more than two seconds in standby mode can lock the keypad; pressing and holding this key for another two seconds can unlock the keypad.

Pressing and holding "#" key for more than two seconds in standby mode can enable the silent function; pressing and holding this key for another two seconds can resume the previous mode.

### Icons displayed on the main screen (Icons may be changed without further notice)

The first line of the screen may display the following icons:

-  Antenna and signal reception strength
-  Line 1
-  Roam
-  Battery indicator
-  Missed call(s)
-  Ring
-  Vibration

 
---

## 5. Operating Instructions

### Switch on Your EASYUSE

The phone can be switched on by pressing and holding the ending key, and then the power-on animation is displayed on the screen. If the SIM card and phone have no password protection, it will automatically search the network. After searching and registering the network successfully, it enters the standby mode and the user can make or answer a call.

If the phone fails to find the network, it remains in the limited-service state.

If the screen displays “↓” after it is switched on, please switch the phone off and check whether the SIM card is properly installed.

If a password or PIN code for the phone is required after it is switched on, please input the correct one, and “\*” will be displayed on the screen as the content during the entry. Then press MENU key for confirmation. Please contact your network supplier if you do not know the PIN code.

### Switch off Your EASYUSE

**Press and hold the ending key to turn the phone off. After the switch-off animation is displayed on the screen, the phone will be switched off.**

### Enter functions

In idle mode, you can enter the following functions (Phone Book, SMS, Ring Tone Settings, Time and Date Settings) in turn by pressing the MENU key consecutively.

### Making a Call

There are three ways to make a call:

1. When the handset is in standby mode, press and hold the memory key from M1 to M4 to dial the phone number stored in the memory key.
2. Press the memory key, and then press the call key to dial the phone number stored in the memory key.
3. In standby mode, press the MENU key to enter the Phone Book, and select a record from the list. Press the calling key to make a call.

**Emergency call: When the handset is switched on, you can dial the emergency number by pressing and holding the call key, whether the SIM card is in the handset or not.**

### Recent Calls

The phone can save 10 recent call numbers. Press the calling key in standby mode to display the call numbers. You can press the calling key to dial a desired number directly by selecting it with side key A or side key B.

### Missed Calls

 
When you have missed calls, the main screen will show this and you can access the list to view the missed calls by pressing the MENU key.

### Setting Ring Volume

When the handset is in standby mode, you can press Side Key A to increase the volume and press Side Key B to decrease the volume of the ring tone.

## Storing Phone Numbers

There are two ways to store the user-defined numbers.


1. In the standby screen, you can input the phone numbers by pressing the numeric keys. Press one key of M1~M4 memory keys to enter a confirm window of “?”, and then press the MENU key; the numbers will then be stored into the memory key. You can cancel the action by the ending key.

2. In the standby screen, input the numbers. You can press the MENU key to enter the Phone Book. Select an available place in the list by the side key A/B, and then press the MENU key to store it. You can return to the standby screen by pressing the ending key.



Note: The storage capacity of the phone is 45.

## Reading and Deleting SMS

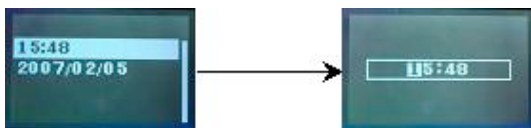 
In idle screen, press the MENU key twice to enter the SMS list. Select a record in the list by side key A/B, and then press the calling key to read the message. Press the MENU key and the phone displays “?” to ask you whether to delete the message. Press the MENU key, and the message is deleted. You can return to the idle screen by pressing the ending key.

## Setting the Ring Tone

In the screen of ring tone settings, there are nine ring tones. You can preview and select one of them by pressing the Side Key A/B. Press the MENU key to enter the next function, or press the ending key to return to the standby screen.

## Setting the Time and Setting Date:

In the screen of time and date settings, you can select the highlight item by the side key A/B. Press the MENU key to enter the edit window. If you want to save the result, please press the MENU key. You can return to the standby screen by pressing the ending key.



## Appendix I Trouble shooting

Trouble	Possible reasons
The phone cannot be switched on	<ol style="list-style-type: none"><li>1. Is there any power in the battery?</li><li>2. Is the battery installed properly?</li></ol>
Battery cannot be charged	<ol style="list-style-type: none"><li>1. Check if the charger is connected with the phone correctly.</li><li>2. Is the battery usable? The performance of the battery will be reduced after used for several years.</li><li>3. Is the battery completely discharged? The</li></ol>

	phone needs to be connected to the charger for a while before it can be charged.
Fails to register to the network	<ol style="list-style-type: none"> <li>1. The signal is too weak, or there may be some radio interference around. Check the signal strength meter on the screen to see whether vertical lines are displayed.</li> <li>2. Is the SIM card installed properly, poorly contacted or damaged? If the SIM card is damaged, please ask your network operator for replacement.</li> </ol>
Cannot call out	<ol style="list-style-type: none"> <li>1. Is the SIM card registered in the network?</li> <li>2. Is call barring enabled?</li> <li>3. Calling prohibited due to call charges not paid?</li> <li>4. Have you enabled the function of FDN?</li> <li>5. Have you selected line 2 though your network operator doesn't provide this service?</li> </ol>
Cannot call in	<ol style="list-style-type: none"> <li>1. Is the SIM card registered in the network?</li> <li>2. Incoming call prohibited due to call charges not paid?</li> <li>3. Is call diverting enabled?</li> <li>4. Is the "Bar incoming call" function in call barring enabled?</li> </ol>
PIN locked	Input the PUK code supplied with the SIM card to unlock or contact the network operator.
Call charge meter invalid	No metering pulse is transmitted. Please contact your network operator.
SIM error	<ol style="list-style-type: none"> <li>1. SIM card is dirty. Clean it.</li> <li>2. Reinstall the SIM card.</li> <li>3. SIM card is damaged. Replace it.</li> </ol>

## **Appendix II Abbreviations and explanations**

GSM	Global System of Mobile Communication.
SIM	Subscriber Identity Module.
PIN	Personal Identity Number. Usually refers to PIN1. Supplied with SIM card. Used to unlock the SIM card.
PUK	Personal Unlock Code. Supplied with SIM card. It is used to unlock the SIM card if you input wrong PIN code three times consecutively and the SIM card is locked. You can also use it to modify PIN code.